

Installation instructions for the legs

This manual explains how to assemble the legs with the main unit. Be sure to read this manual before assembling.



Be sure to assemble with two or more people.

Accessories

If there is a shortage of parts or a problem, please contact your local distributor or MIMAKI sales office.

Leg x1	Caster holder x2	Leg stay x1	Base plate L x1	Base plate R x1
Roll bar x2	Hexagonal wrench	Tightening pipe x 1	Screws (M5x20) x4	Screws (M5x15) x 14
(With 2 collar×1) (With 4 collar×1)	(4mm)x 1			

How to tighten the screws

1 Use hex wrench to temporarily tighten the screws (just tighten lightly).




Push the hex wrench into the tightening pipe and retighten the screw.



Instruction


1 Fix the Caster holder to the Leg.

- Secure it with the 3 screws (M5x15).
- · Assemble the right and left legs.

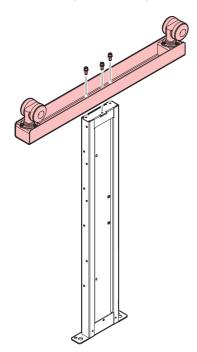

2 Attach the Leg stay to the left and right legs.


- 1. Hook the leg stay onto the screws installed in step 6.
- 2. Tighten the screw temporarily (just tighten lightly).

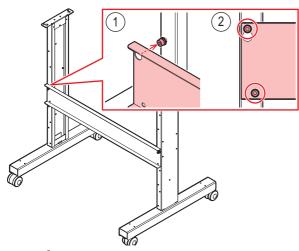

0


 Attach the leg stay so that the openings of the left and right legs are on the inside.

3 Lock the casters.

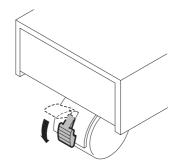

4 Attach the Base plate L/R.

 Fix the base plate to the leg with 2 screws (M5x15) while pushing it in the direction indicated by arrow.

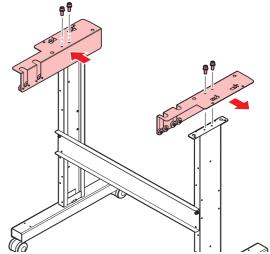


Attach it so that the bearing is on the outside...

0

5 Attach the roll bars.

• Set the roll bar on top of the bearing installed.

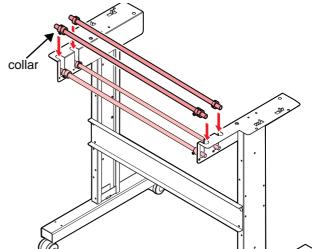


Set the roll bar with four collars so that it is on the outside.

6 Mount the Main unit on the legs.

- Align the protruding part of the leg with the hole on the bottom of the main unit (the

 mark on the side of the main unit is a guide) and insert.
- 2. Make sure that the rubber foot on the bottom of the unit is set on the leg.
- 3. Set the other side in the same way.

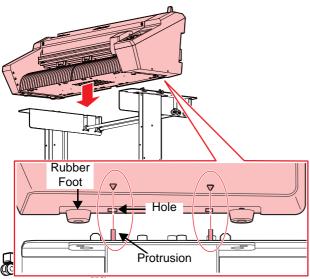


The unit should be lifted by two or more people.




Push the main unit to the front side and fix it to the leg with 2 screws (M5x20).

- Push the main unit toward the front side until there is no gap between the protrusion on the rear side of the leg and the insertion hole on the bottom of the main unit and secure it.
- Set the other side in the same way.

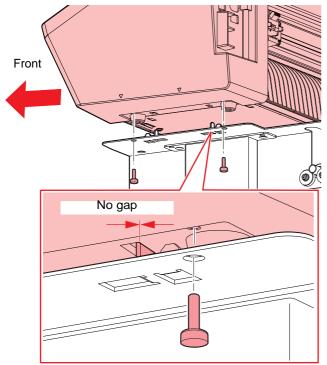




 Tighten the fixing screws until the convex part of the leg lightly touches the bottom of the side plate GR. Take care not to over-tighten the screws.

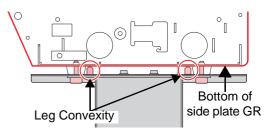

8 Fully tighten the screws on the leg stay.

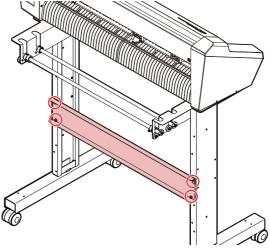



 Turn the roll bar manually to ensure it rotate smoothly. If it gets stuck or has trouble rotating, loosen the screws that have been tightened, adjust the left and right legs so that they are parallel, and then tighten the screws.



脚 組み立て手順書

本書では、本体と脚の組み立てについて説明しています。必ず、本書をお読みになってから組み立ててください。

● 必ず、二人以上で組み立ててください。


付属品

数量が足りなかったり、不具合があったりした場合は、販売店または弊社営業所までご連絡ください。

脚 x2	キャスターホルダー x2	脚ステー x1	ベース板左 x1	ベース板右 x1
ロールバー x2	六角レンチ(4mm)x1	増し締め用パイプ x1	ネジ(M5x20)x4	ネジ(M5x15)x14
(カラー 2 個付き ×1) (カラー 4 個付き ×1)				

ネジの締め方

1 六角レンチを使って、ネジを仮止め(軽く締める 程度)する。

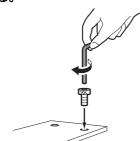


2 六角レンチに増し締め用パイプを差し込んで、ネジを増し締めする。



手順


1 脚にキャスターホルダーを固定する。

- ネジ (M5x15) x3 で固定してください。
- 左右2脚組み立ててください。

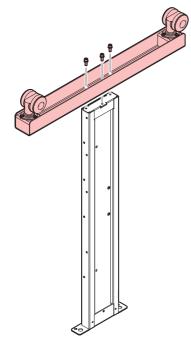

2 左右の脚に脚ステーを取り付ける。


- 1. 手順6で取り付けたネジに脚ステーを引っ掛ける。
- 2. ネジを仮止め(軽く締める程度)にする。

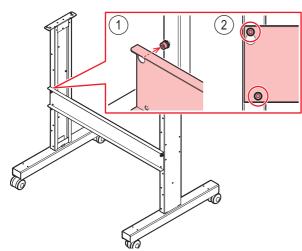

0


● 左右の脚の開口部が内側になるように脚ステーを取り付けてください。

3 キャスターをロックする。

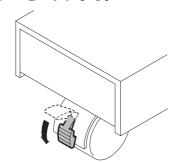

4 ベース板 L/R を取り付ける。

• 矢印の方向に押しながら、ネジ (M5x15) x2 で固定 してください。

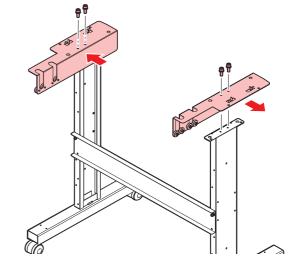


0

ベアリングが外側になるように取り付けてくだ さい。

5 ロールバーを取り付ける。

ベアリングの上に、ロールバーをセットします。

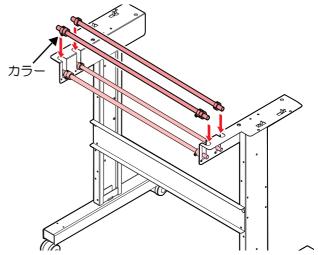


0

カラー4 個付きのロールバーが外側になるように セットしてください。


6 本体を脚に載せる。

- 1. 脚の突起部分に、本体底面の穴(本体側面の▽印が 目安)を合わせて差し込む。
- 2. 本体底面のゴム足が脚の上にセットされているかどうかを確認する。
- 3. 反対側も同様にセットする。

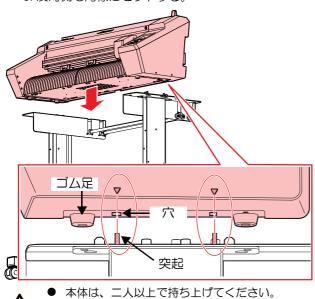


7 本体を正面側に押して、本体と脚をネジ (M5x20) x2 で固定する。

- 脚後方側の突起と本体底面の差し込み穴の隙間がなくなるまで、本体を正面側に押してから固定してください。
- 反対側も同様にセットしてください。

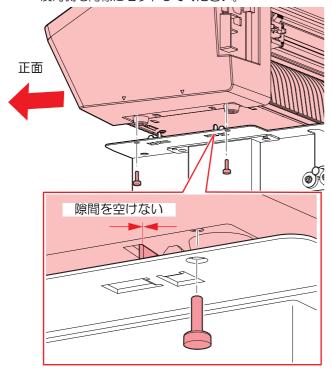




脚の凸部が側板 GR の底面に軽く当たる程度に、 ネジを締め付けます。強く締めすぎないように 注意してください。

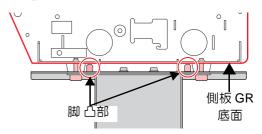

8 脚ステーのネジを本締めする。

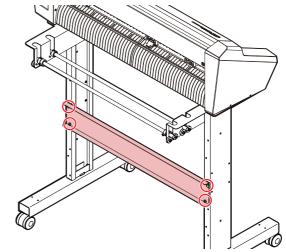



● ロールバーを手で回して、スムーズに回転する ことを確認してください。引っかかったり回転 に支障がある場合は、固定したネジを緩めて、 左右の脚が平行になるように調整してからネジ を締めてください。